


FRONT

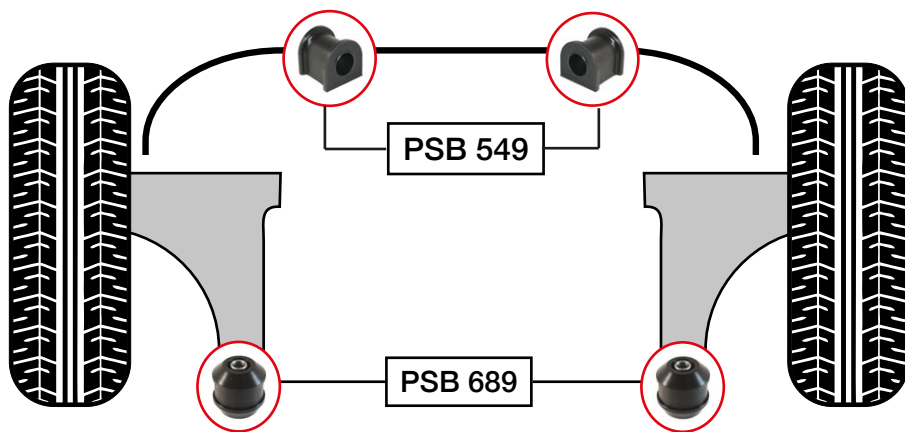

PSB 549 (Installation instructions same as PSB 405)

Front Anti Roll / Sway Bar Bushing

OE Number : 48815 - 06080

PSB 689

Front Lower Arm Rear Bushing

OE number : 4806806070 / 4806906070

1. Remove worn OE bushing by pressing out or using a blow torch.
2. Ensure outer metal casing of original rubber bushing is removed, which can be done by cutting with a hacksaw and knocking out with a chisel
3. Clean housing with sand paper to remove sharp edges, so as not to damage new bushing.
4. Remove metal sleeve from new poly bushing.
5. Lubricate inside and outside of new poly bushing with multi-purpose grease.
6. Press new bushing into the arm, ensure the most tapered flange faces the arm when pressing in the new poly bushing.
7. Bench vice or mechanical press can be used
8. Once the bushing is inserted. tap the metal sleeve into the bushing, using a rubber mallet.
9. The new bushing installation is now complete.

PSB 577 (Installation instructions same as PSB 549)

Rear Carrier / Trailing Arm Bushing

OE Number: 48780-33010


PSB 135F

Rear Lateral Link Bushing - Front

OE Number: 48710-33030

1. Remove worn OE bushing by pressing out or using a blow torch.
2. Ensure outer metal casing of original rubber bushing is removed, which can be done by cutting with a hacksaw and knocking out with a chisel
3. Clean housing with sand paper to remove sharp edges, so as not to damage new bushing.
4. Remove metal sleeve from new poly bushing.
5. Lubricate inside and outside of new poly bushing with multi-purpose grease.
6. Press two bushing halves into housing. (Rubber hammer or by hand)
7. Insert metal sleeve into bushings..
8. The new bushing installation is now complete.

REAR

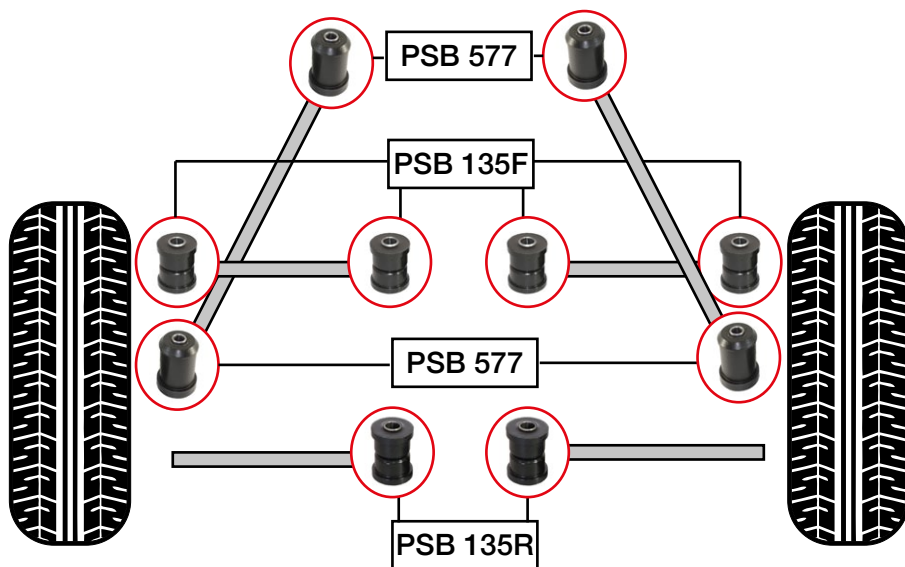

PSB 135R (Installation instructions same as PSB 135F)

Rear Lateral Link Bushing - Rear

OE Number: 48730-33020 (L) / 48740-33020 (R)